



Temperature sensor WX172

1	Temperature sensor	Temperaturfühler	WX172
2	Overheat protector	Überhitzungsschutz	WX230
3	Humidity sensor (optional)	Feuchtigkeitsfühler (optional)	WX173
4	Circuit board	Platine	WX112
5	NTC-resistor/thermistor	NTC-Widerstand/Thermistor	WX231

We recommend to use only the manufacturer's spare parts.